

# SAUNA

The **Sauna**<sup>1</sup> has its **Heater**<sup>2</sup> located by the door. Its **Control Panel (Tylo)**<sup>3</sup> is from the other side of the wall – for more information, please refer to the following page.

On the ceiling, there is a **Heater Temperature Sensor**<sup>3</sup> that measures the temperature in the Sauna and an **Extract Grille** that leads away stale air.


For more information on

To switch off the Sauna completely, shut the **Breaker No. 3** labelled “**Main Supply Sauna**” on the 12-way **Distribution Board “DB MECH”** in the **Main Plant Room (B)**.

The Sauna should be checked and maintained at least once a year by **Dröm UK Ltd** – for specific contact details, please refer to the bottom of this page.



Tylo Control Panel

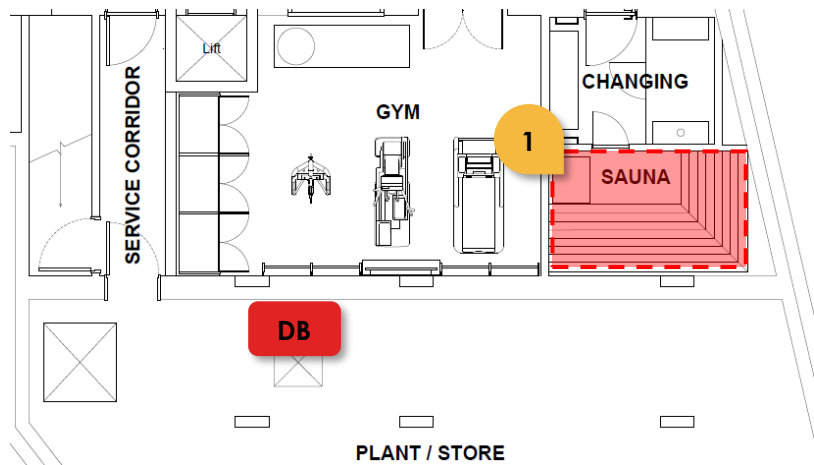

Sauna supplied and maintained by – **Dröm UK Ltd**

Dröm House  
Abbot Close, Byfleet  
Surrey  
KT14 7JN

T: 01932 355 655  
E: [info@dromuk.com](mailto:info@dromuk.com)  
W: [www.dromuk.com](http://www.dromuk.com)



# SAUNA – EXTRACTION

The **Extract Grille<sup>1</sup>** serving the ventilation in the **Sauna (B)** is located on the LHS of the ceiling. The **Vent Pipe<sup>2</sup>** then leads to the **Main Plant Room (B)** and ends on the rear wall, underneath the gas pipes behind the AHU.

**SAUNA (B)**



**MAIN PLANT ROOM (B)**

