 



SUBZERO – OVEN – ICBSO30TE


Control Panel

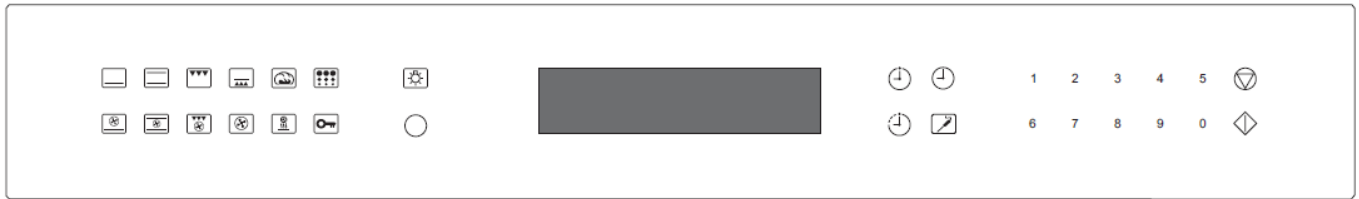

Cooking Modes



Selecting a Cooking Mode:

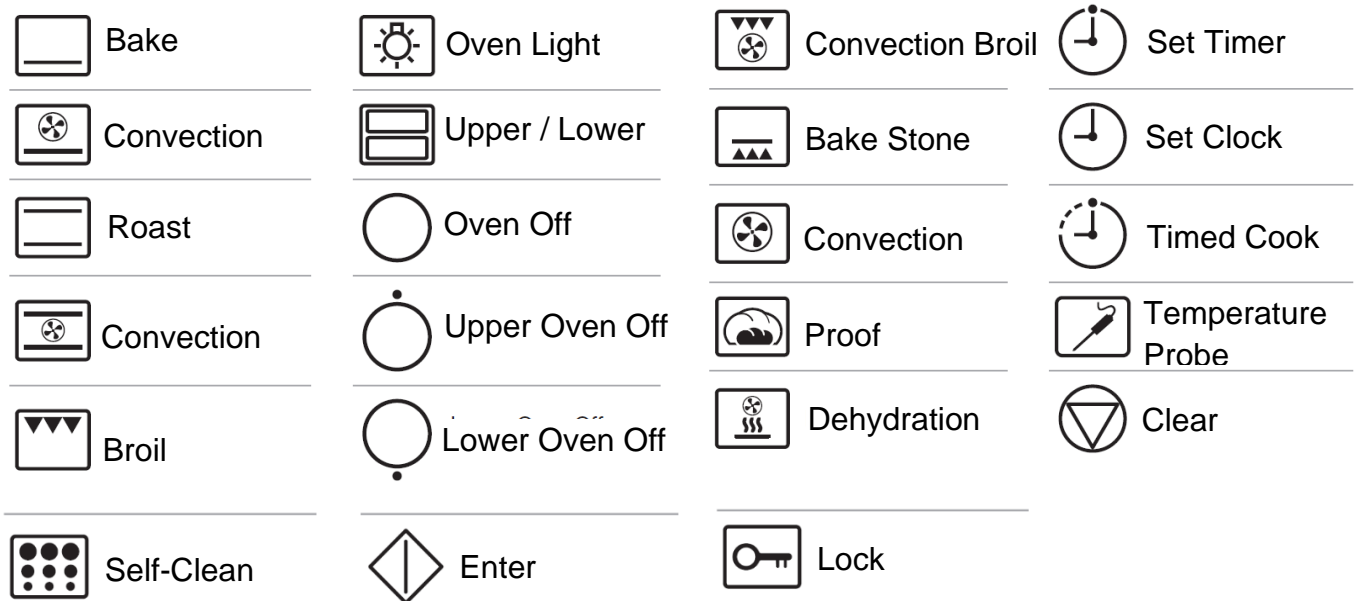Touch desired cooking mode on the control panel. Then touch  .



For detailed information on the **Cooking Modes**, please refer to the [page 7](#) of the O&M.

Setting Timer:

1. Touch  on the control panel.
2. Touch number pads to set time in hours and minutes.
3. Touch  .

Cleaning

Stainless steel: Use a non-abrasive stainless steel cleaner and apply with a soft lint-free cloth.

Black glass: Spray glass cleaner on a cloth to clean.

Oven rack: Remove and place on a flat surface near the sink. Clean with hot water and mild detergent. Do not immerse in water. Towel dry.


Control panel: Spray degreaser on a cloth and wipe.

Troubleshooting

For more information, refer to [page 9](#) of the O&M Manual.

SUBZERO – STEAM OVEN – ICBCSO30TM

Control Panel

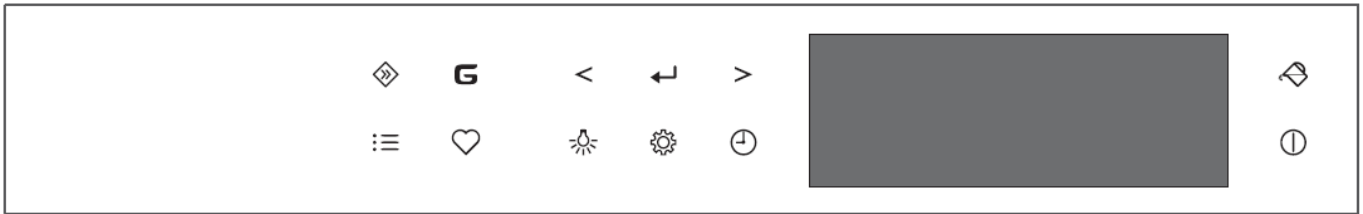

Cooking Modes



Steam



Convection



Convection Steam








Convection Humid





Reheat

Selecting a Cooking Mode:

1. Touch .
2. Use  and  to select the desired cooking mode.
3. Touch .
4. Review the information on the display.
5. Touch .

For detailed information on the **Cooking Modes**, please refer to the [pages 8–9](#) of the O&M.

Setting Timer


1. Touch  on the control panel.
2. Touch number pads to set time in hours and minutes.
3. Touch .

Water tank


Touch  to remove the water tank.

The water tank holds enough water for 1,5 hours of continuous steam (4–5 cooking sessions). Use fresh, cold tap water.

After Each Use

1. Touch . For modes using steam, do not remove the water tank until "WATER IS BEING PUMPED OFF" no longer appears on the display.
2. Open the door to the at-rest position (1) and allow to cool.
3. Once cool, wipe the interior dry.
4. Close the door.

(1)

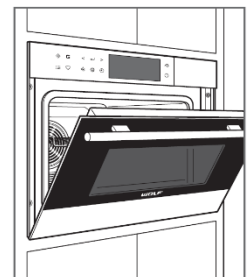

Cleaning

Stainless steel: Use a non-abrasive stainless steel cleaner and apply with a soft lint-free cloth.

Black glass: Spray glass cleaner on a cloth to clean.

Oven rack: Remove and place on a flat surface near the sink. Clean with hot water and mild detergent. Do not immerse in water. Towel dry.

Control panel: Spray degreaser on a cloth and wipe.

Troubleshooting

For more information, refer to [page 11](#) of the O&M Manual.